LifeFitness

TREADMILL 97TE

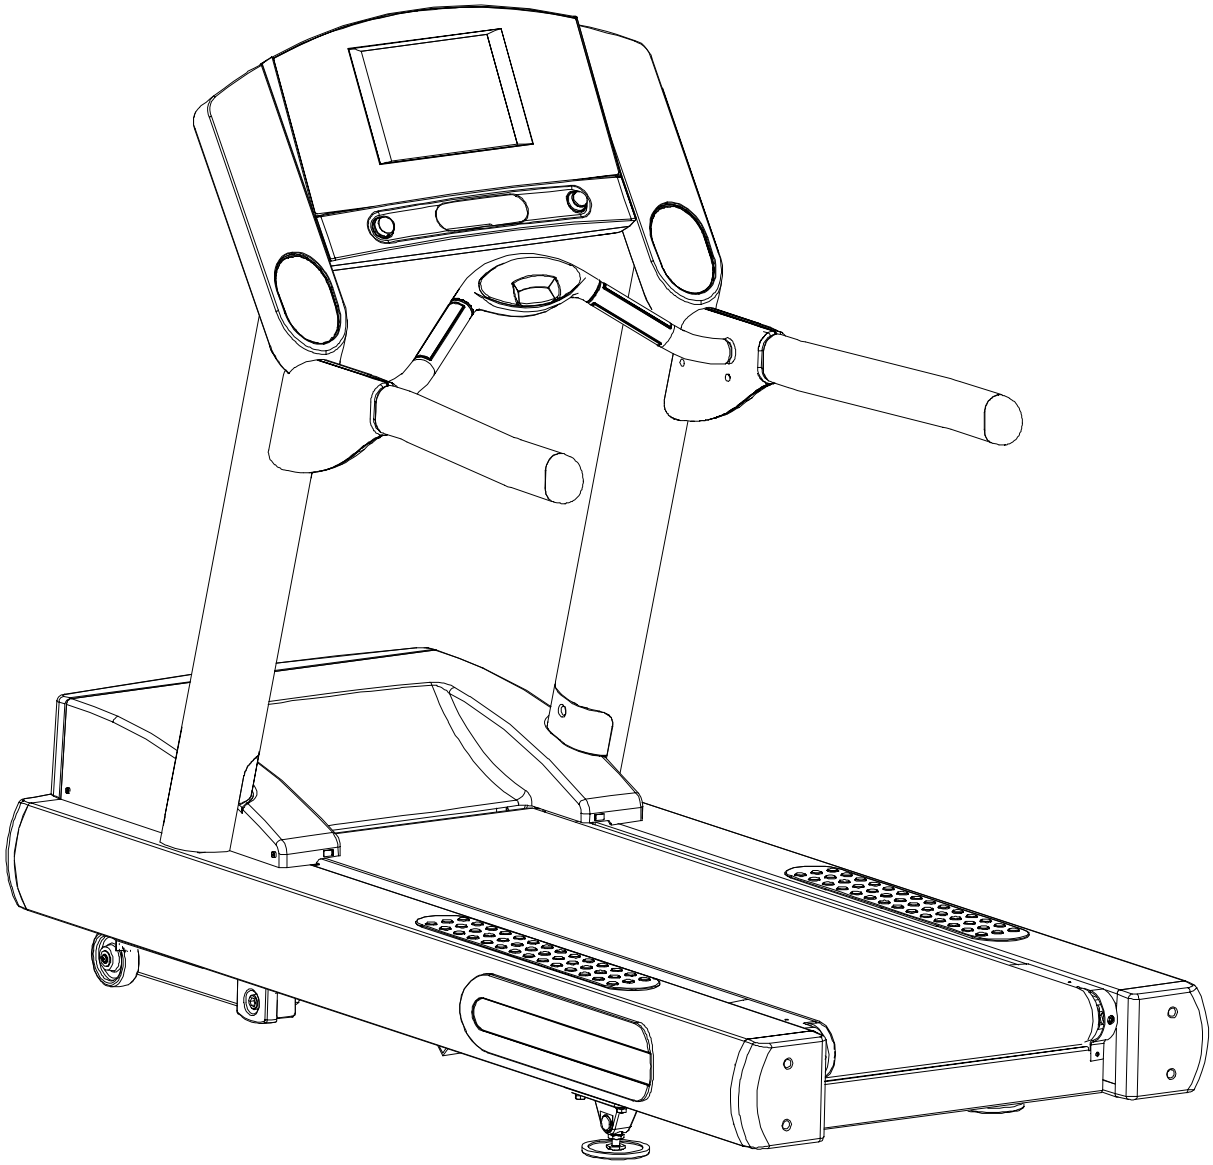

Customer Support Services
PARTS MANUAL

TREADMILL 97TE

Notes:

TREADMILL 97TE
Contents

PAGE

FRAME ASSEMBLY 4

CONSOLE ASSEMBLY 5

CONSOLE COMPONENTS 6

HANDRAIL ASSEMBLY 7

COVERS, END CAPS, HARDWARE 8

BELT, DECK, REAR ROLLER 9

WAX/LIFT ASSEMBLY 10

MOTOR CONTROLLER ASSEMBLY 11

LIFT MOTOR & FRAME 12

DRIVE MOTOR ASSEMBLY 13

WAX COMPONENTS 14

IDLER ARM & STATIC BRUSH 15

LEVELER ASSEMBLY 16

FRONT ROLLER ASSEMBLY 17

ERGO BAR W/LIFEPULSE 18

POWER COMPONENTS 19

CABLES 20

TREADMILL 97TE

Frame Assembly *97TE-0_ _ _-01*

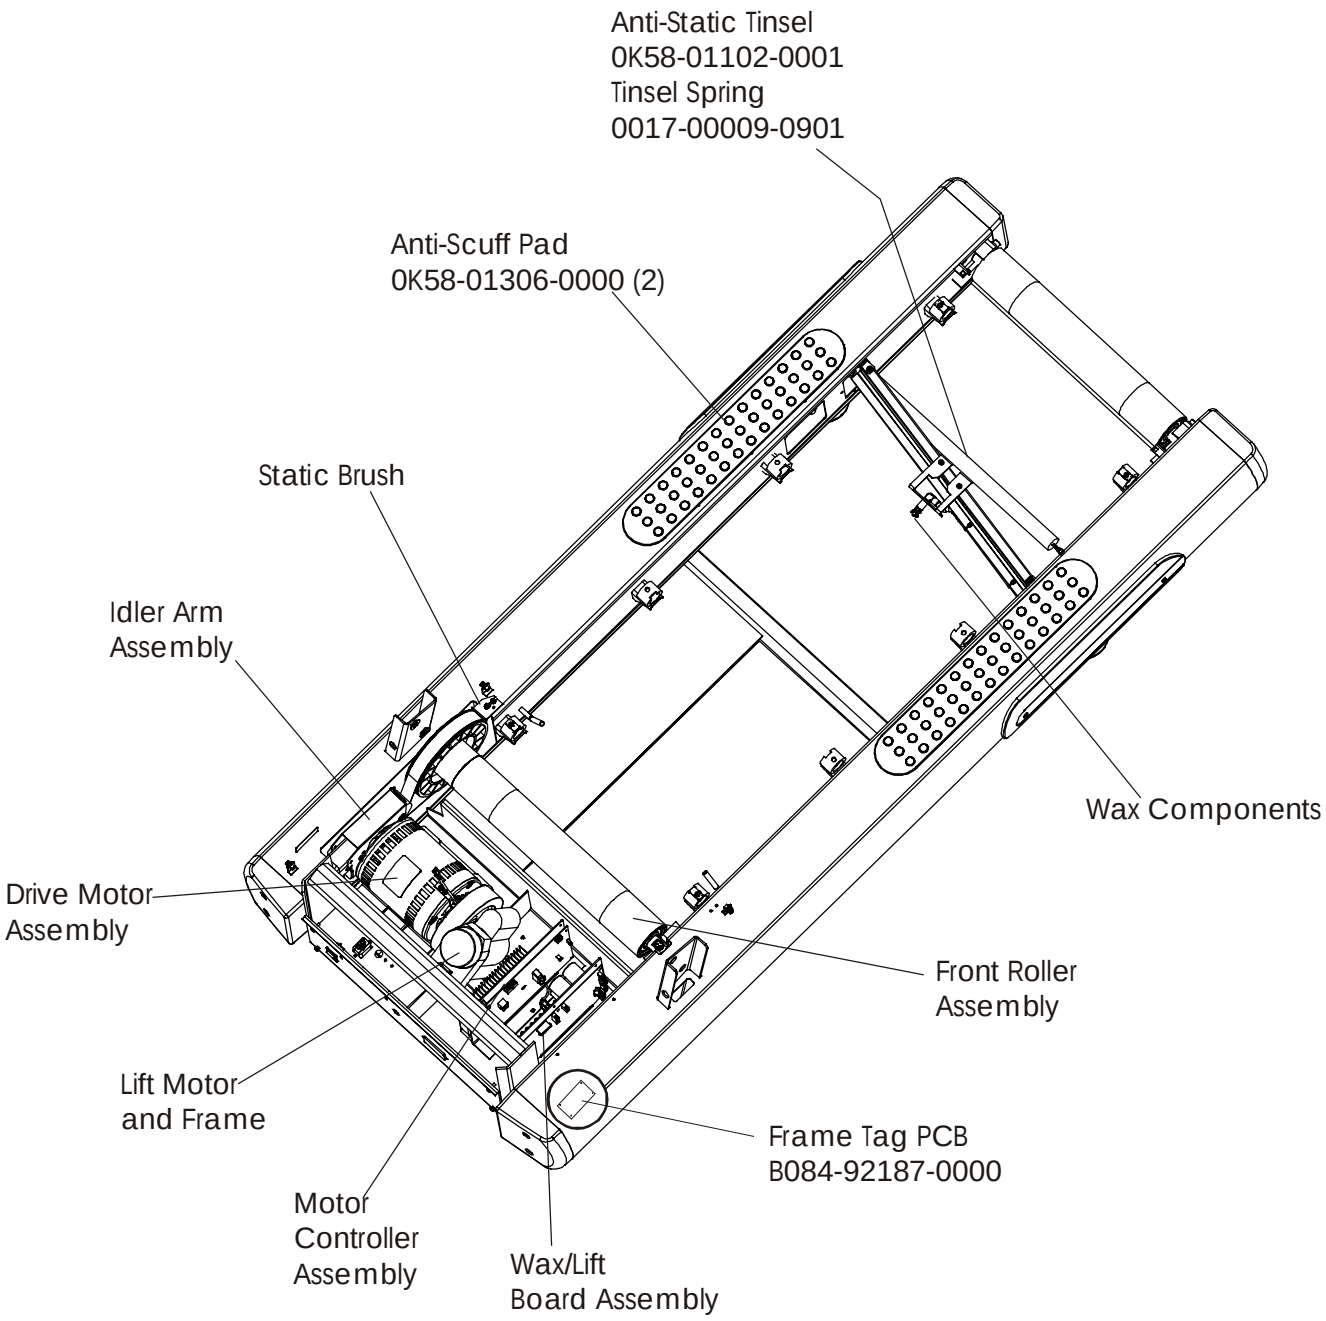

TREADMILL 97TE

Console Assembly *97TE-0_ _ _-01*

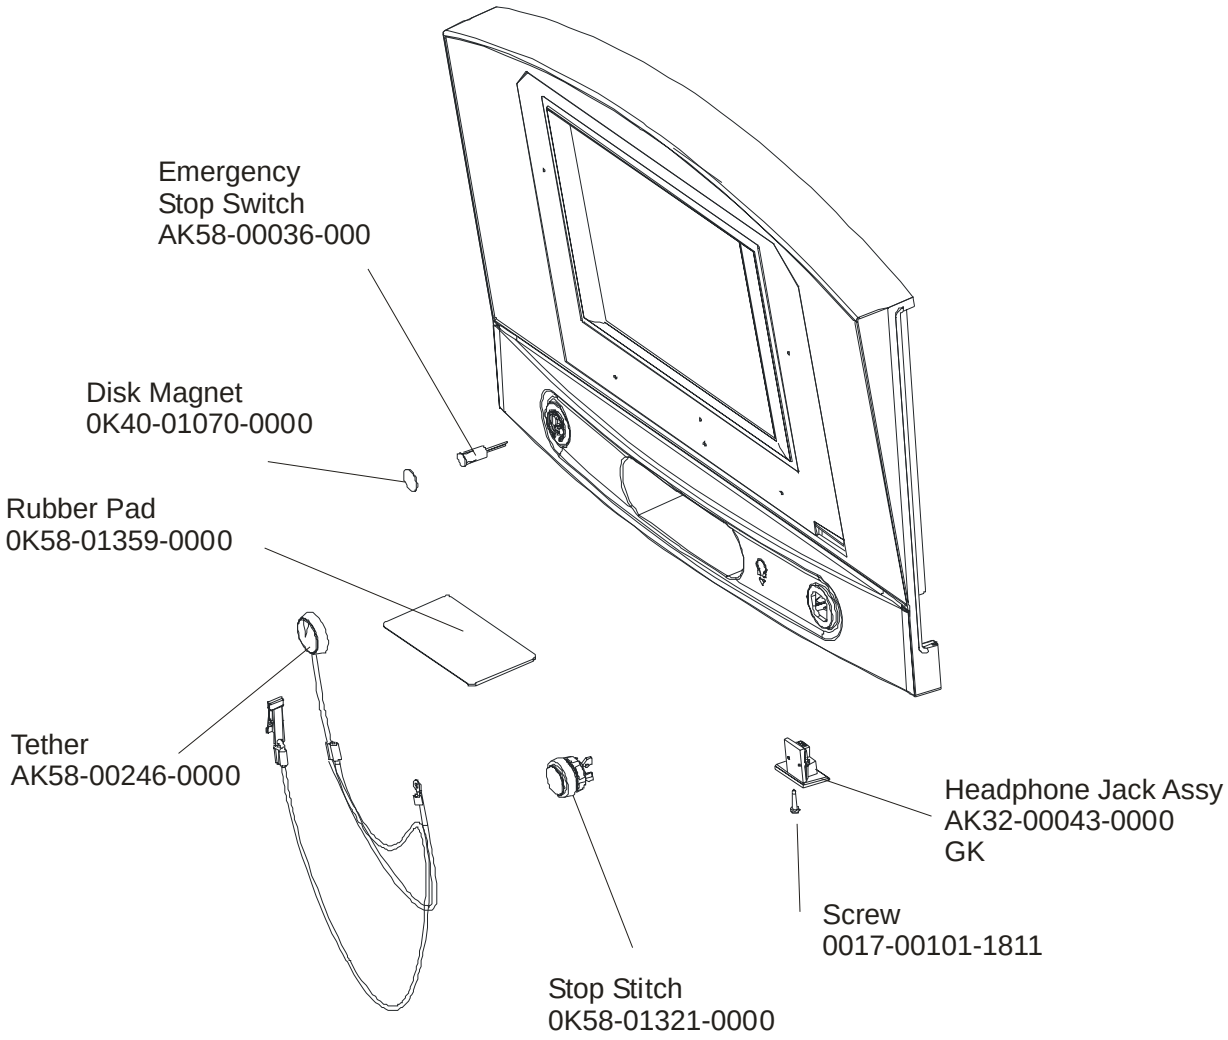

Part number	Description
GK58-00002-0088	SERV KIT LCD CONS PAL POR
GK58-00002-0087	SERV KIT LCD CONS PAL DUT
GK58-00002-0086	SERV KIT LCD CONS PAL ITL
GK58-00002-0085	SERV KIT LCD CONS PAL FRN
GK58-00002-0084	SERV KIT LCD CONS PAL SPN
GK58-00002-0083	SERV KIT LCD CONS PAL GER
GK58-00002-0082	SERV KIT LCD CONS PAL ENG
GK58-00002-0081	SERV KIT LCD CONS NTSC POR
GK58-00002-0080	SERV KIT LCD CONS NTSC FRN
GK58-00002-0079	SERV KIT LCD CONS NTSC JAP
GK58-00002-0078	SERV KIT LCD CONS NTSC SPN
GK58-00002-0077	SERV KIT LCD CONS NTSC ENG

TREADMILL 97TE

Console Components *97TE-0_ _ _-01*

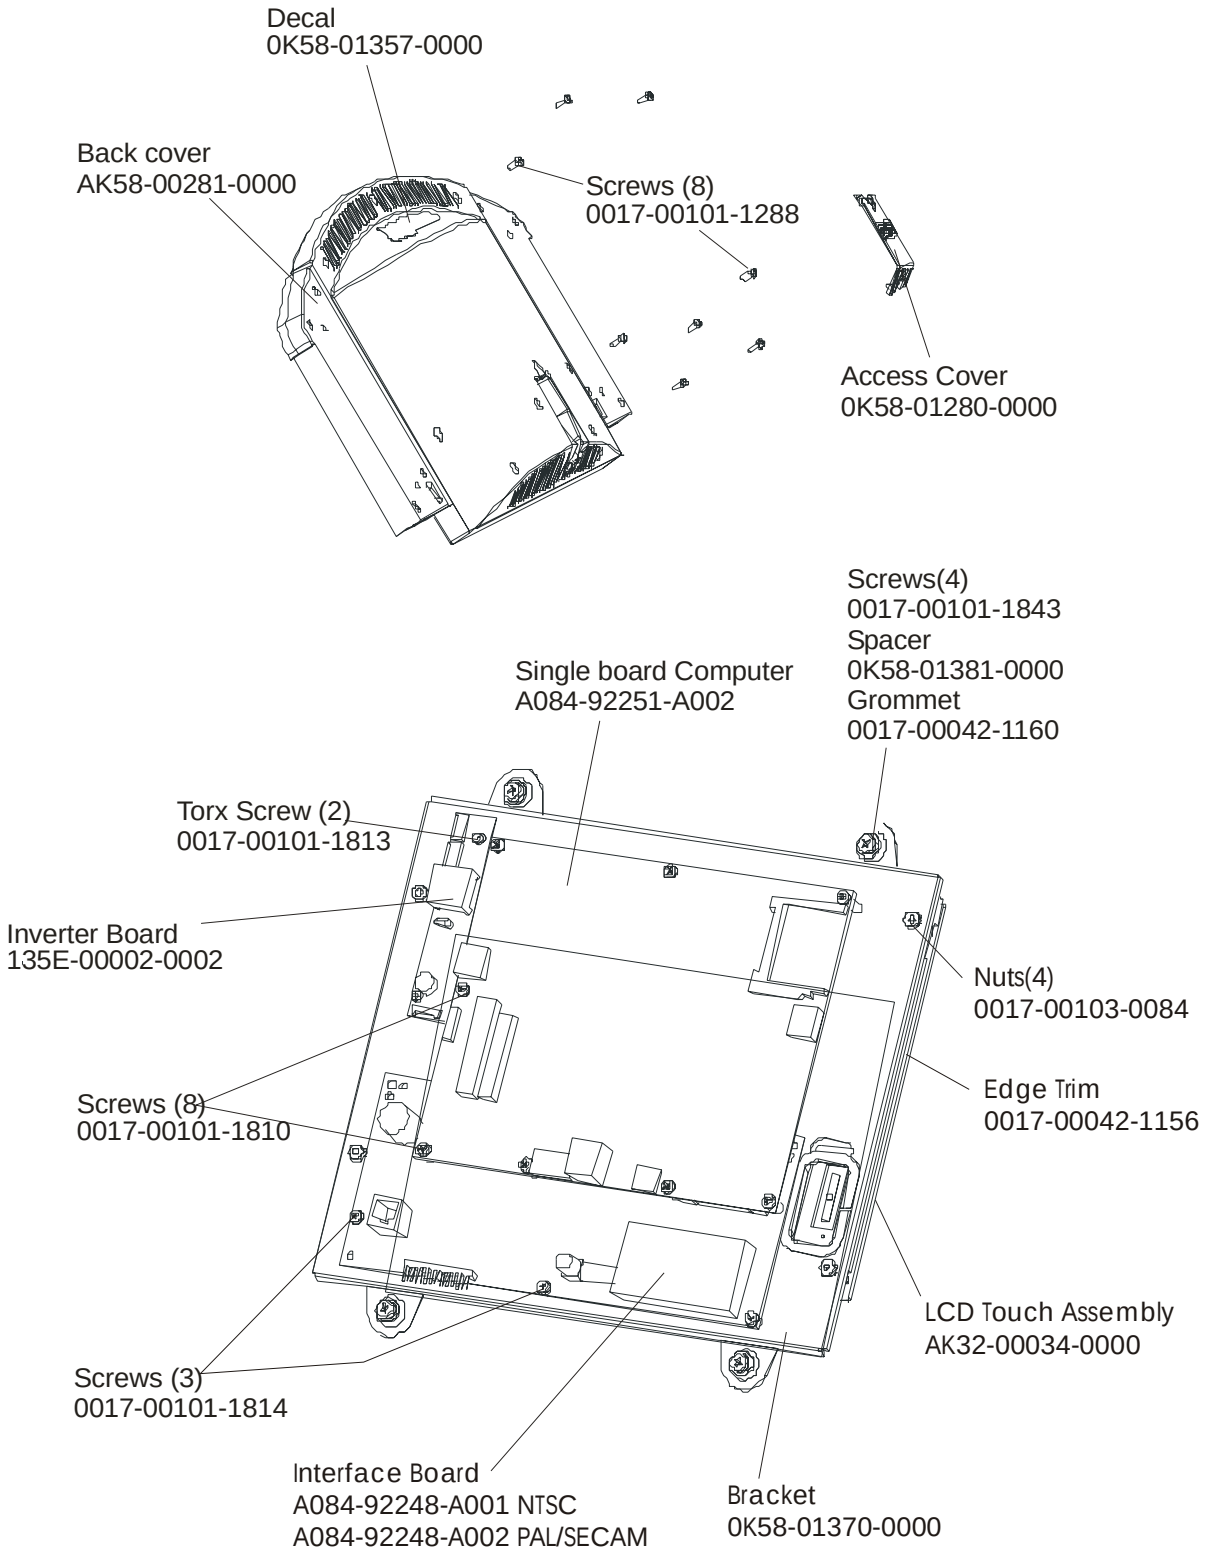

TREADMILL 97TE

Handrail Assembly *97TE-0_ _ _-01*

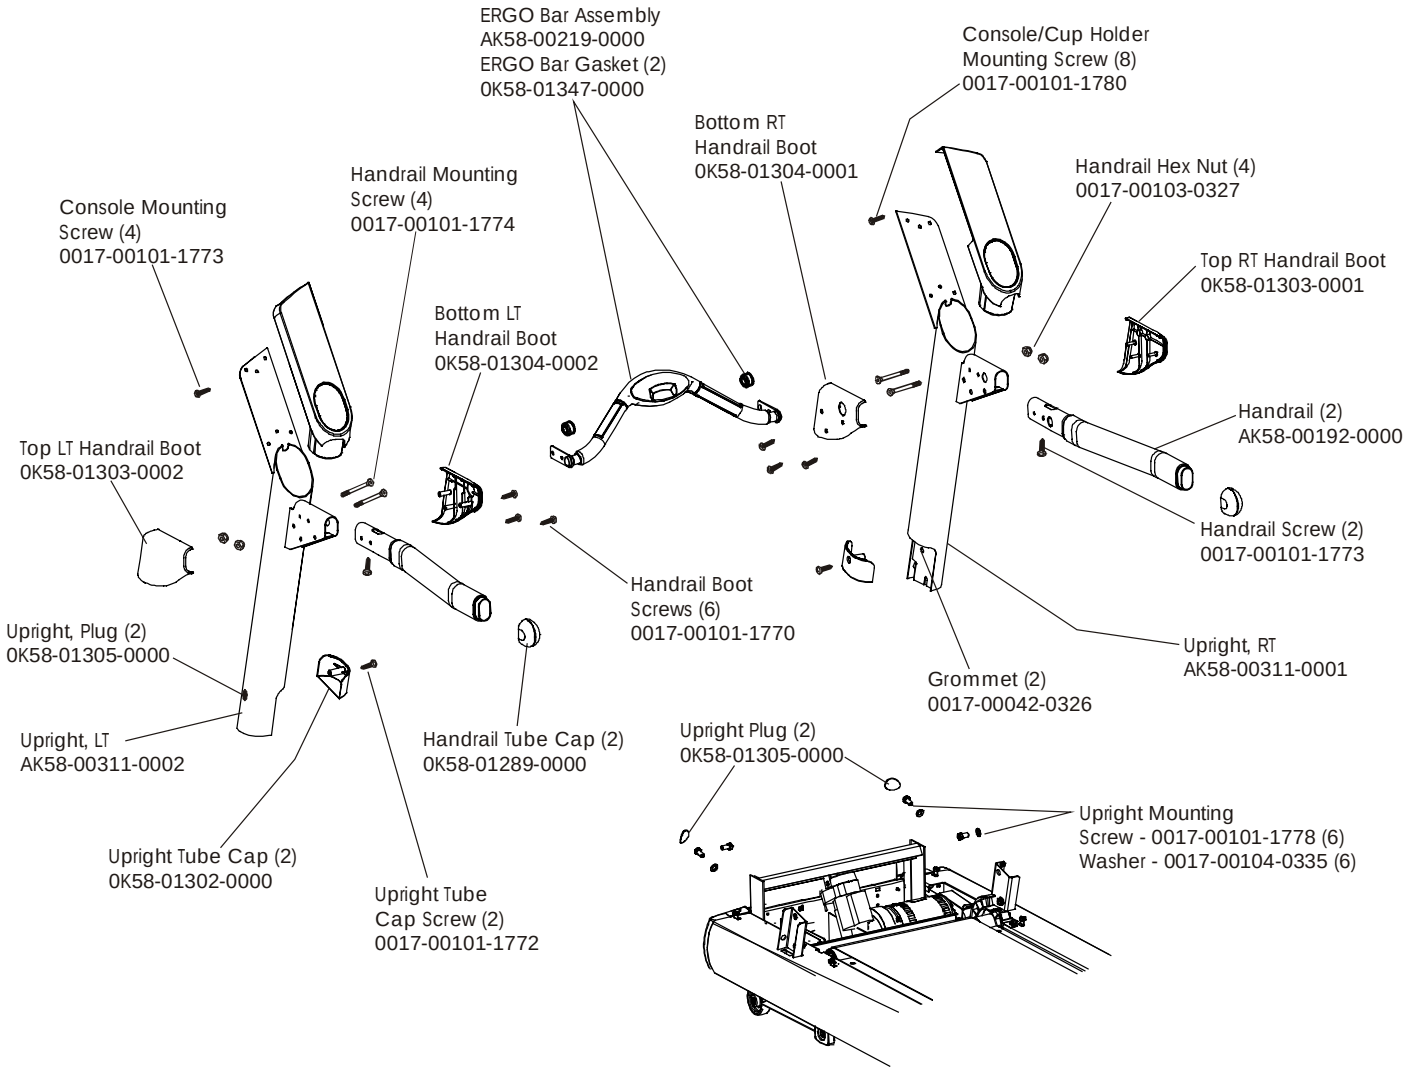

TREADMILL 97TE

Covers, End Caps, Hardware *97TE-0_ _ _-01*

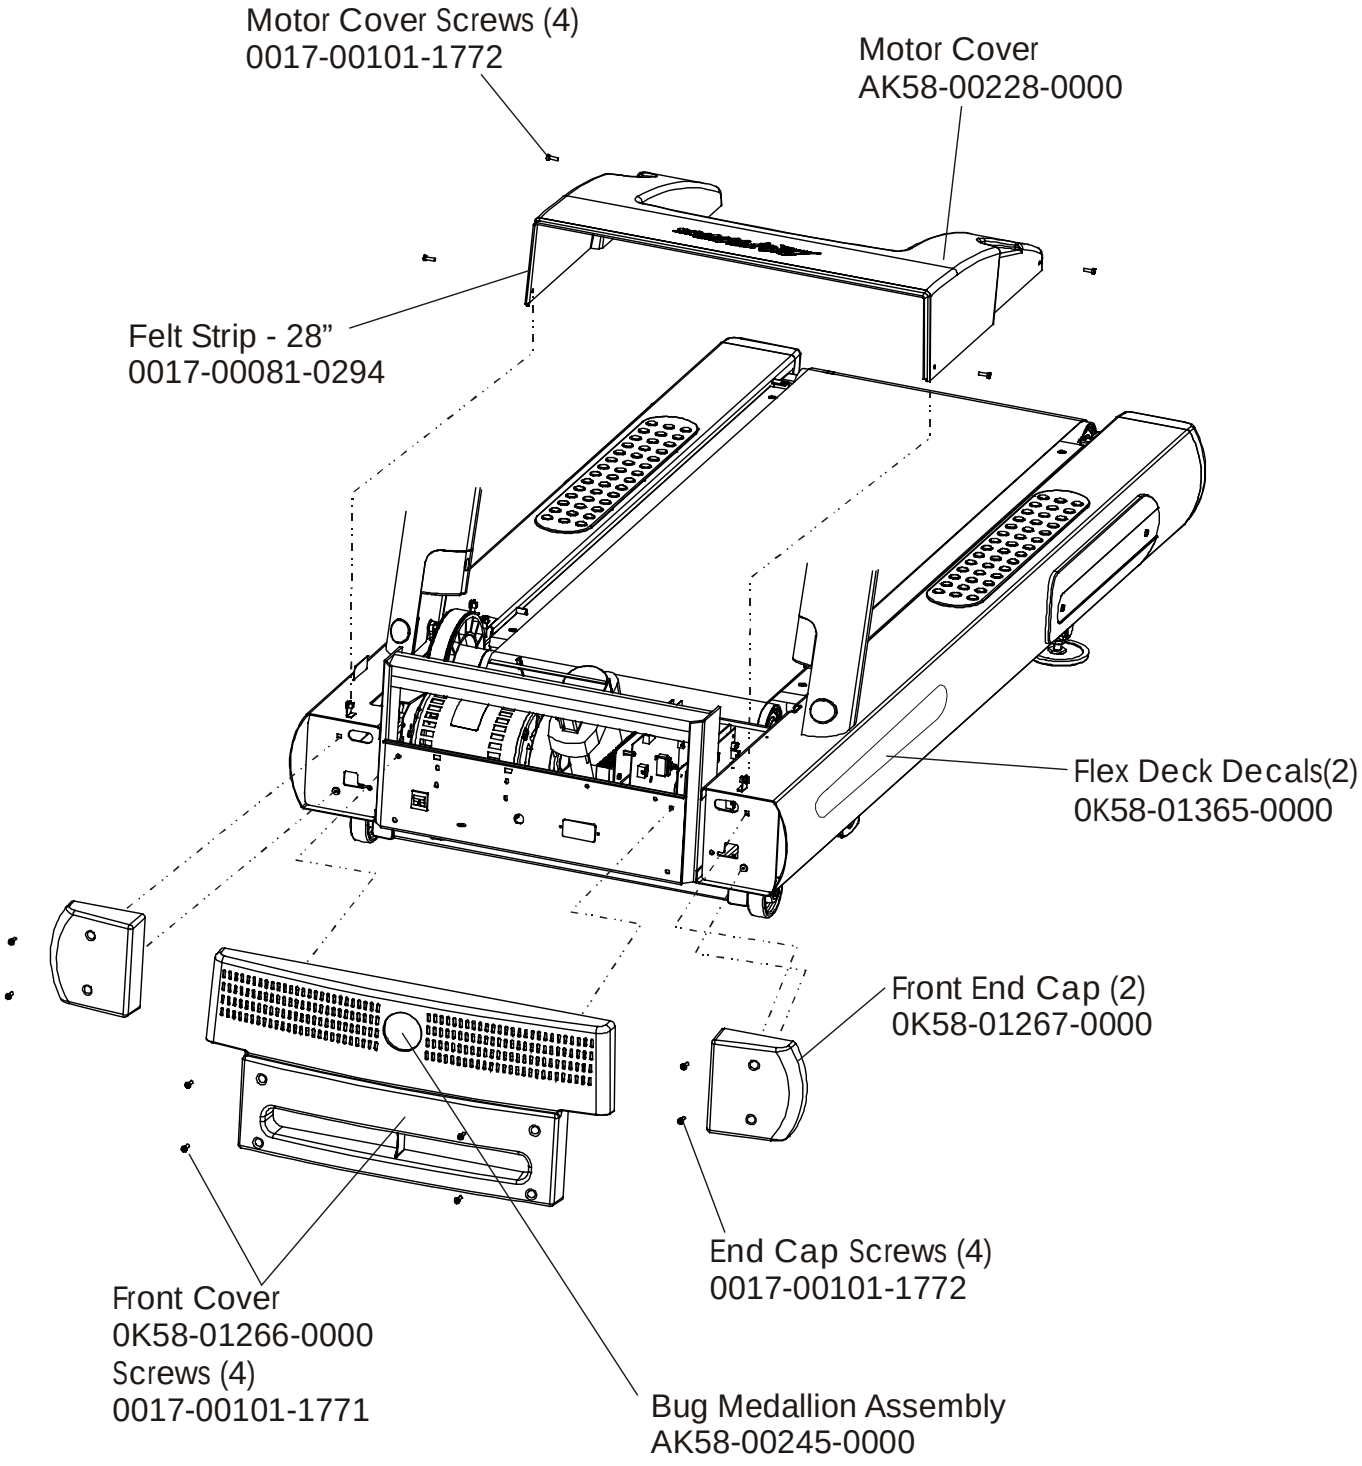

TREADMILL 97TE

Belt, Deck, Rear Roller *97TE-0_ _ _-01*

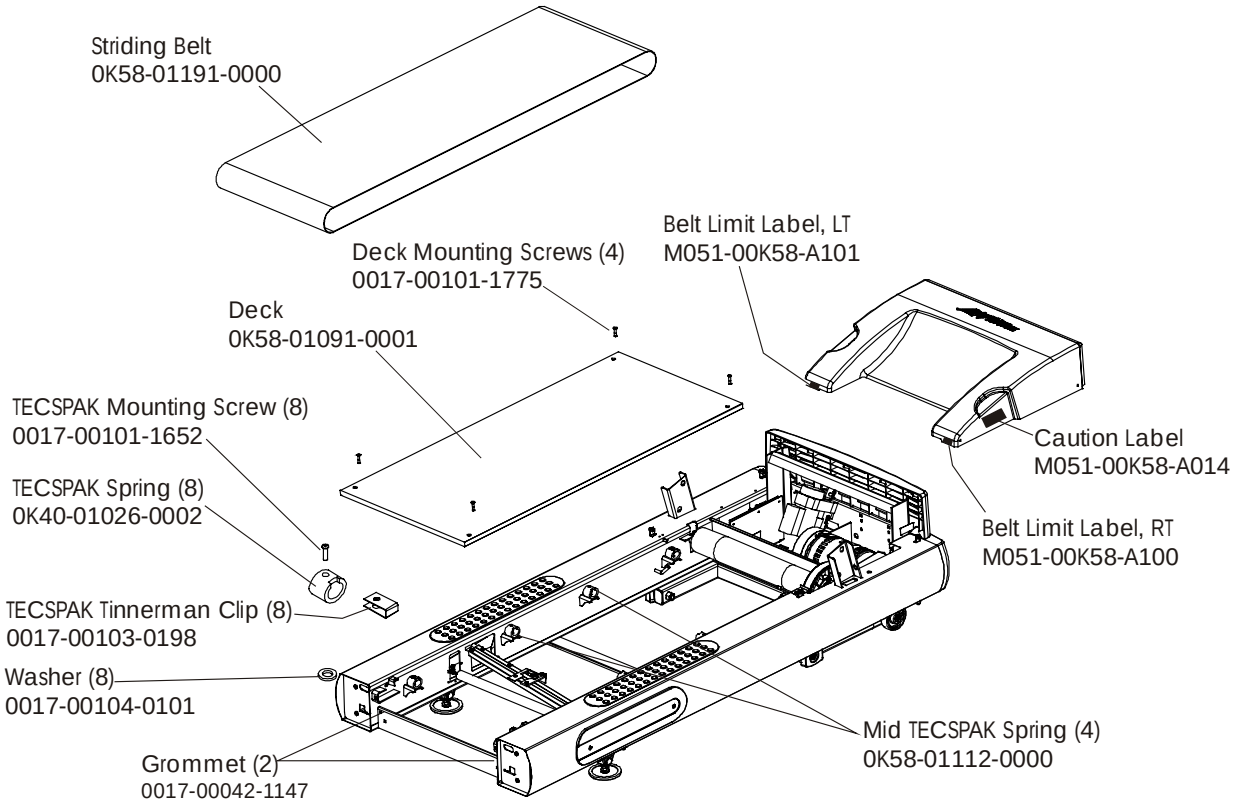

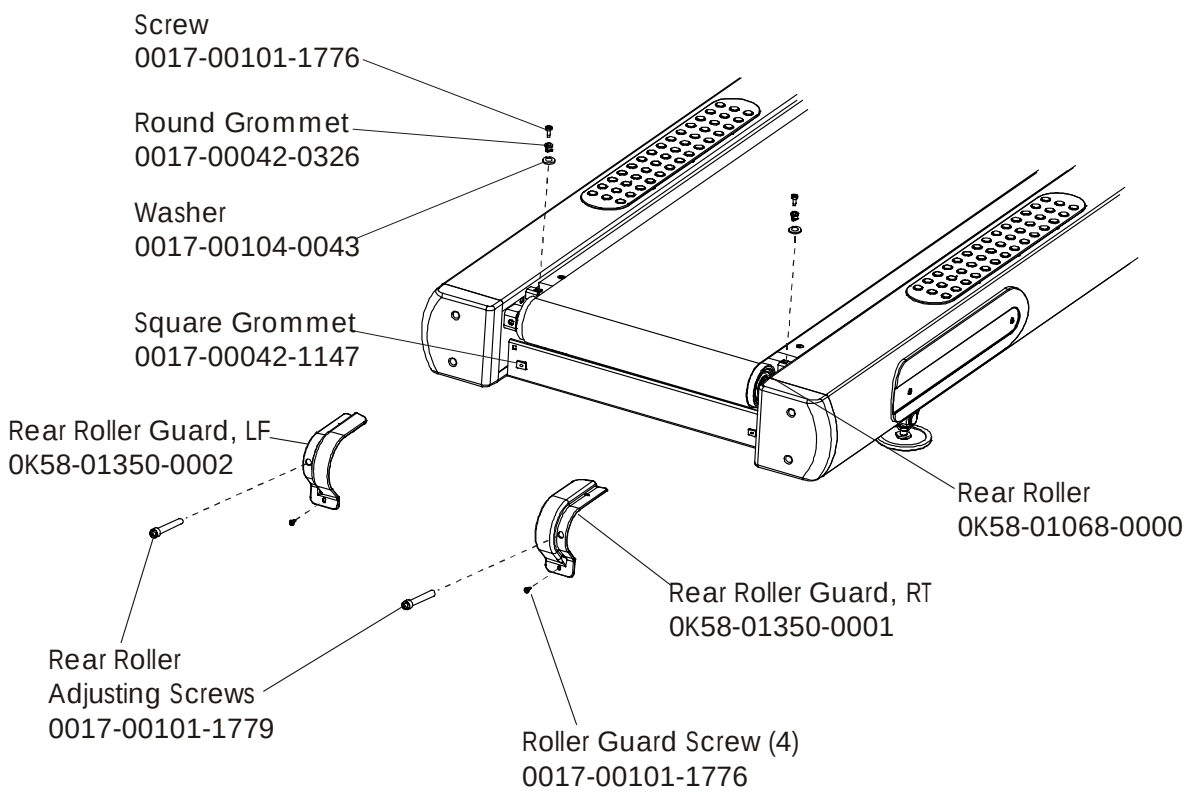

TREADMILL 97TE

Wax/Lift Assembly *97TE-0_ _ _-01*

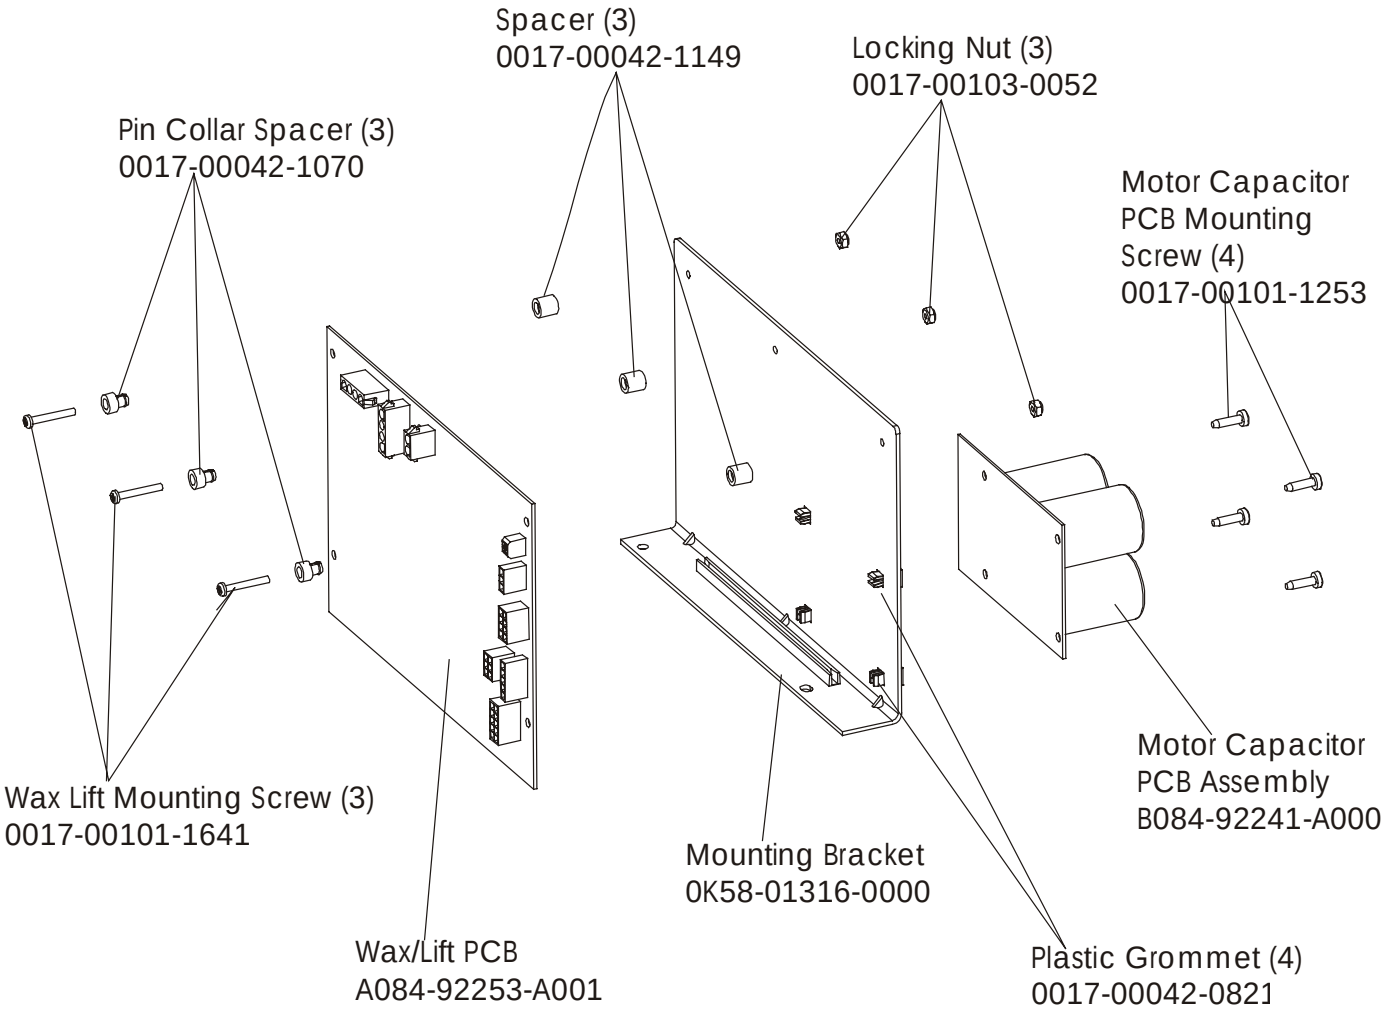

TREADMILL 97TE

Motor Controller Assembly *97TE-0_ _ _-01*

AK58-00242-0000 (100-120v/60Hz)
AK58-00242-0001 (200-240v/50Hz)

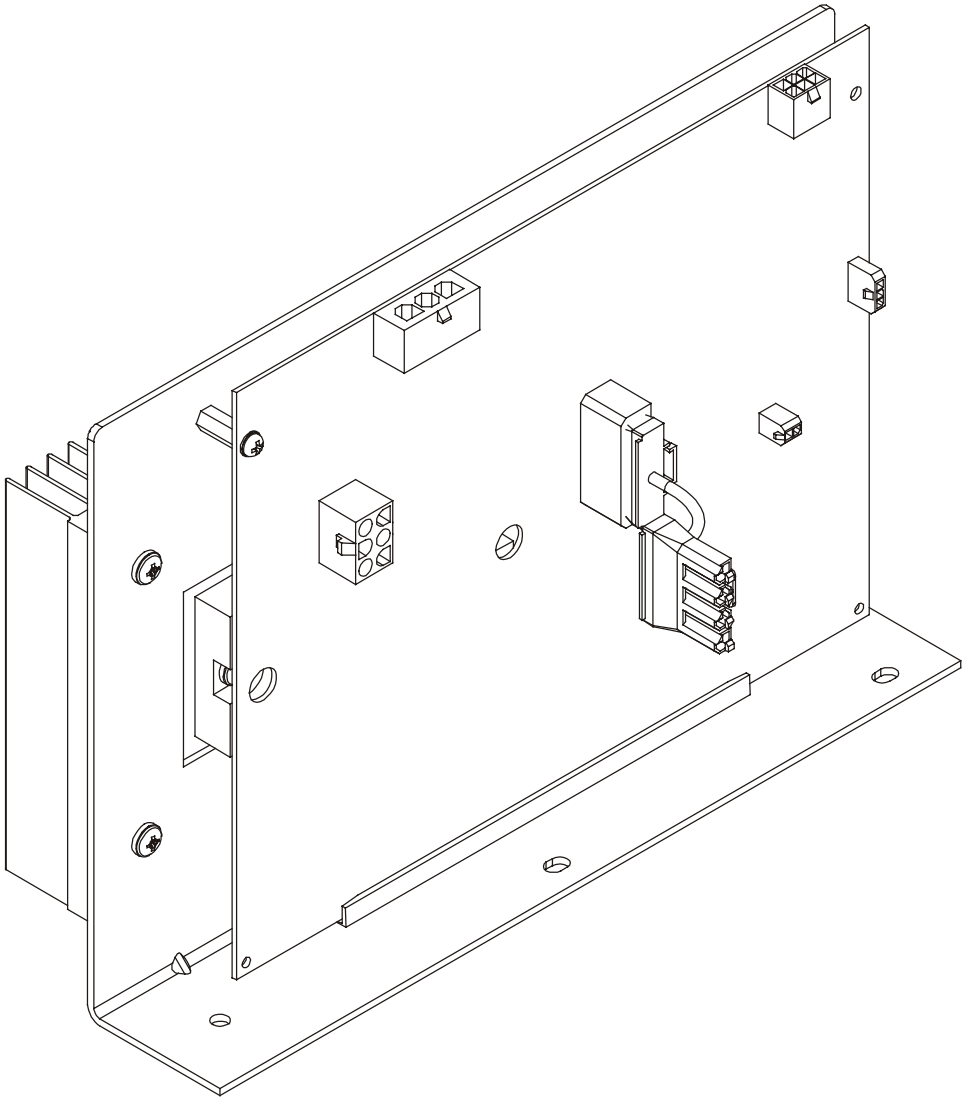

TREADMILL 97TE

Lift Motor & Frame *97TE-0_ _ _-01*

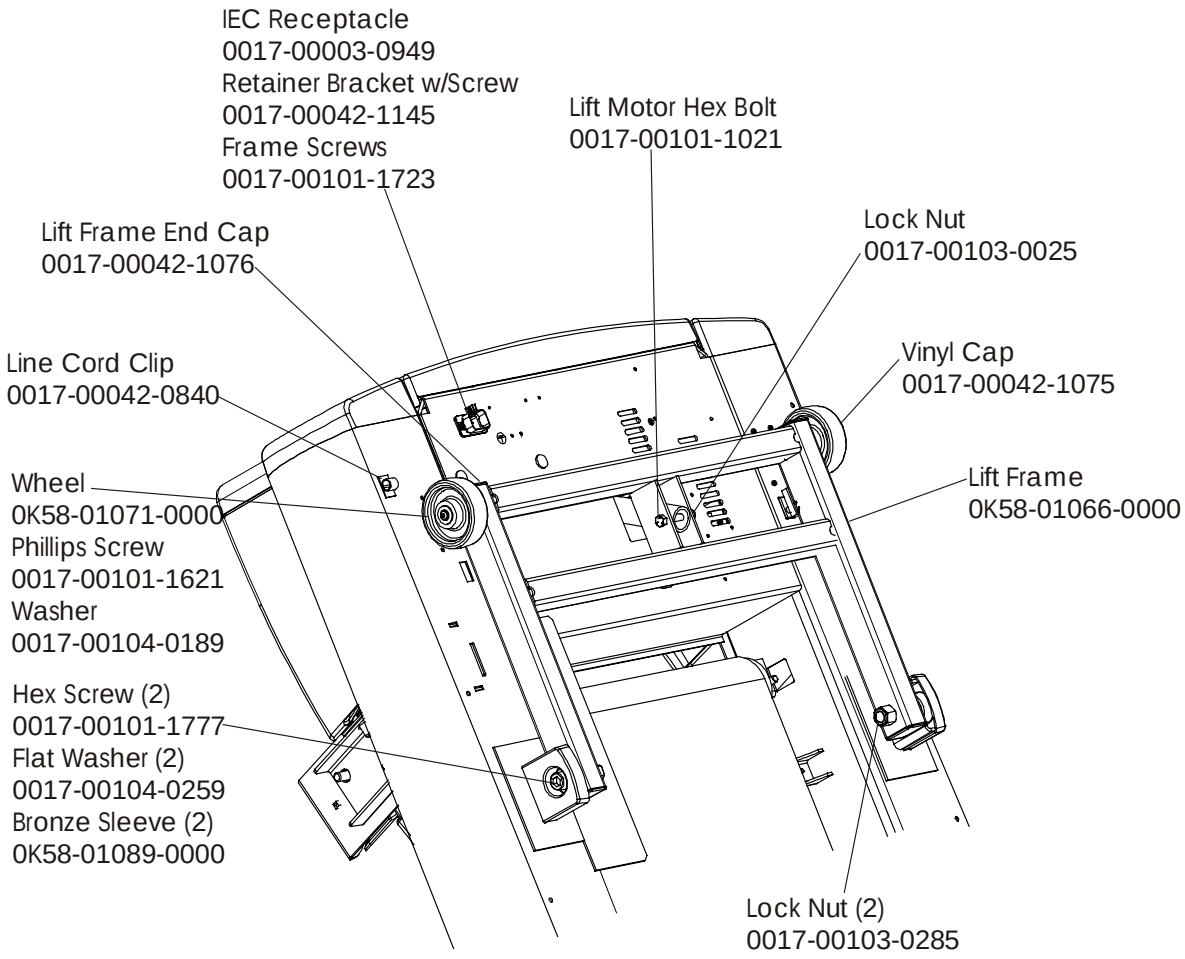

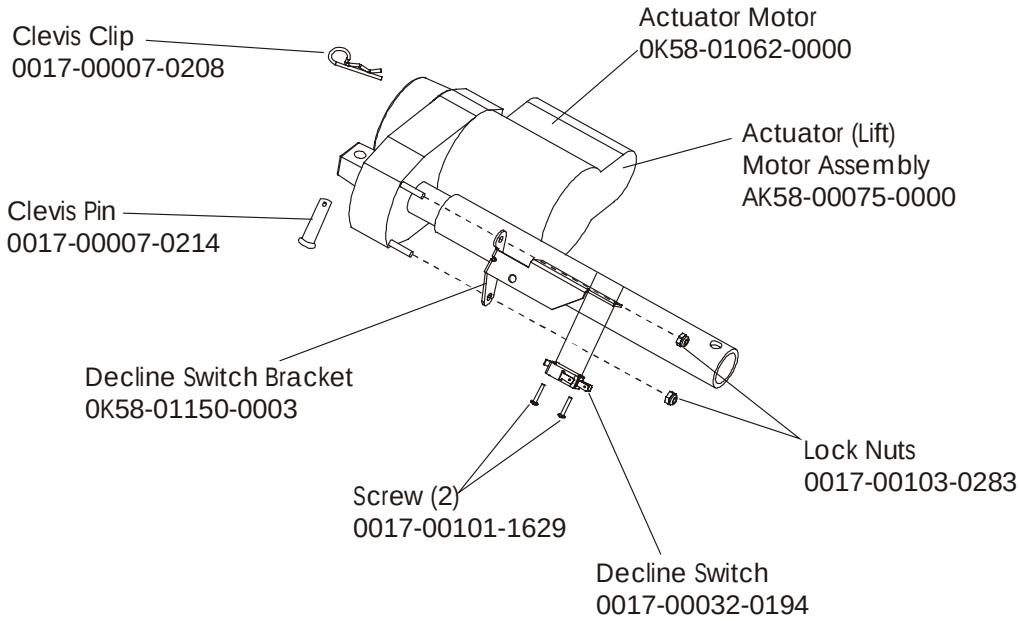

TREADMILL 97TE

Drive Motor Assembly *97TE-0_ _ _-01*

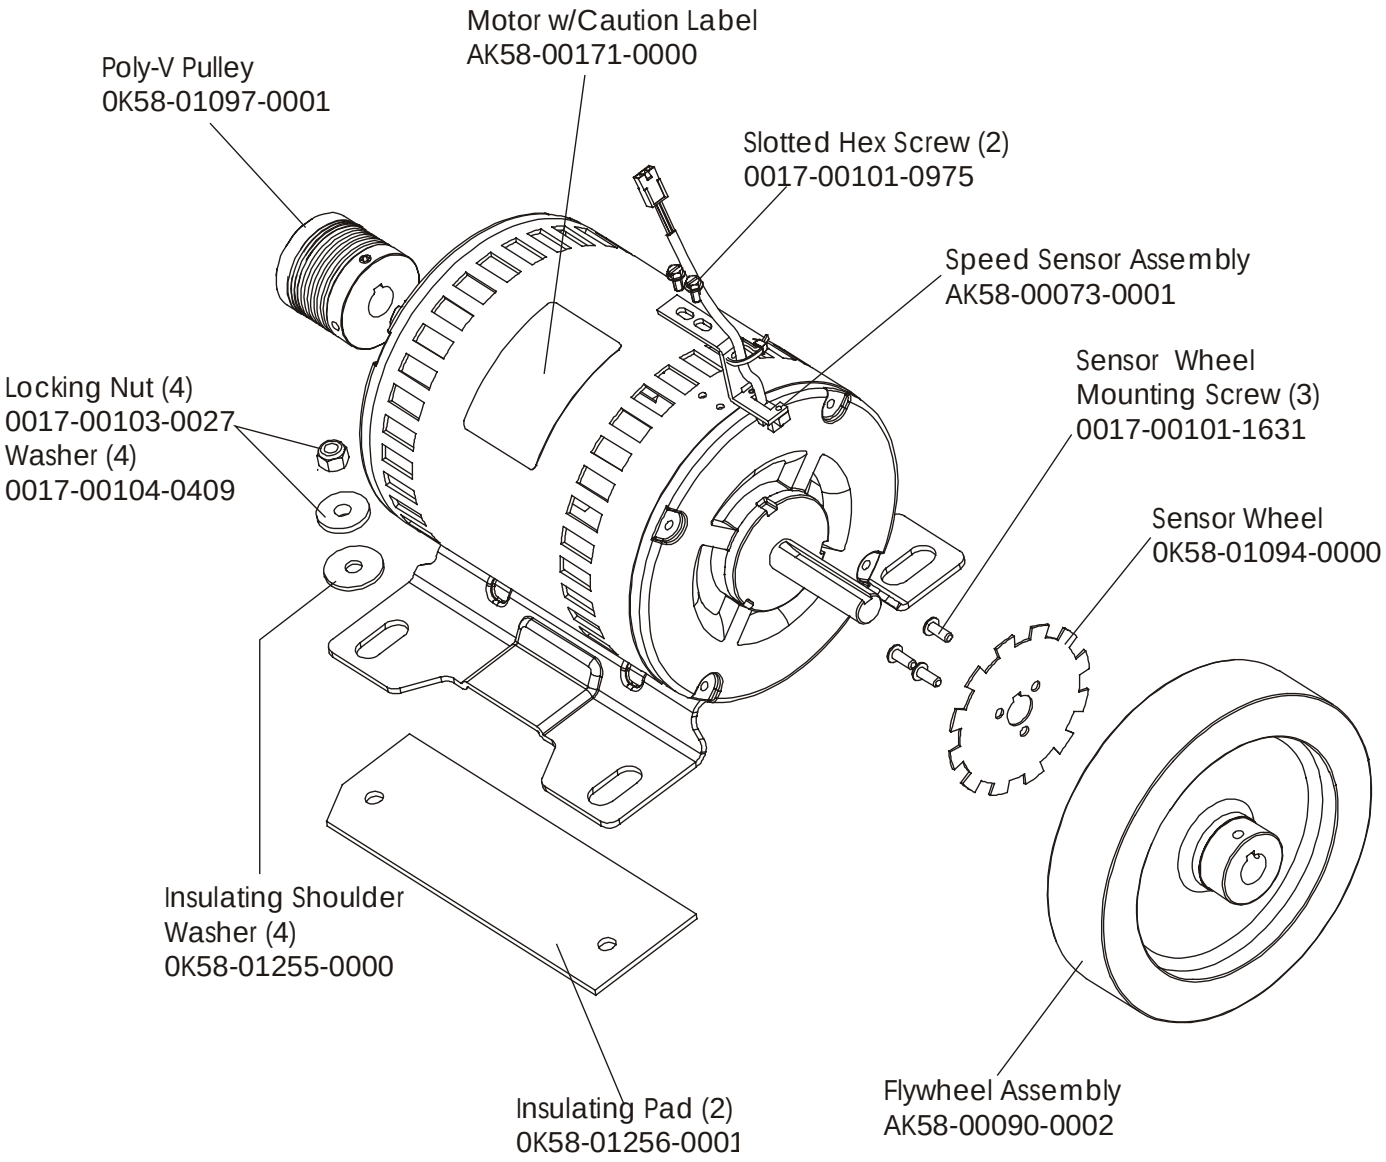

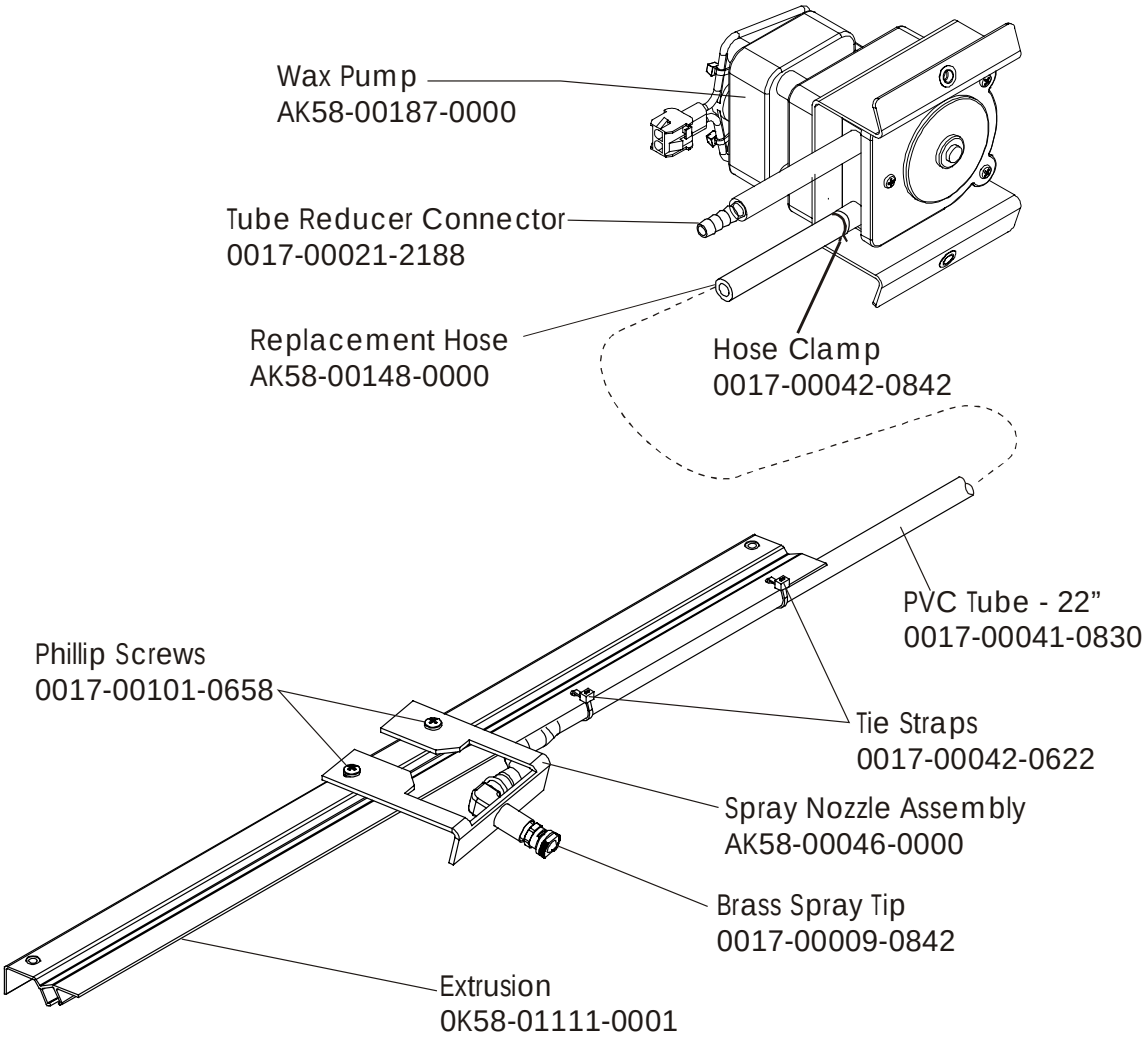
Wax Pump
AK58-00187-0000
Tube Reducer Connector
0017-00021-2188
Replacement Hose
AK58-00148-0000
Hose Clamp
0017-00042-0842
PVC Tube - 22”
0017-00041-0830
Phillip Screws
0017-00101-0658
Tie Straps
0017-00042-0622
Spray Nozzle Assembly
AK58-00046-0000
Brass Spray Tip
0017-00009-0842
Extrusion
0K58-01111-0001

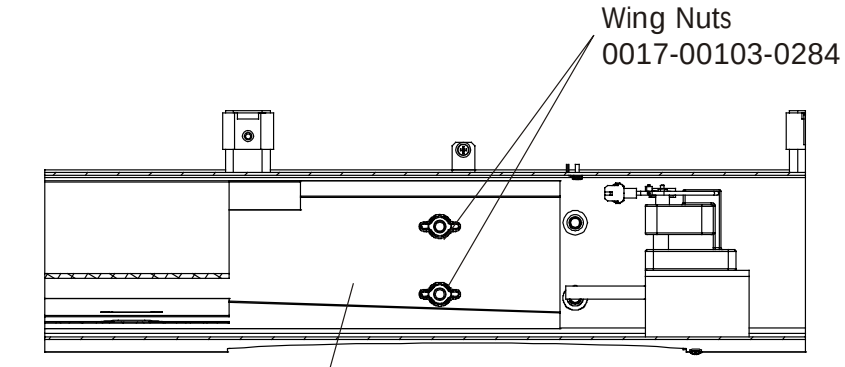
Wing Nuts
0017-00103-0284
Protective Sleeve
0K58-01080-0000
Wax Refill Bag
GK58-00002-0002

TREADMILL 97TE

Idler Arm & Static Brush *97TE-0_ _ _-01*

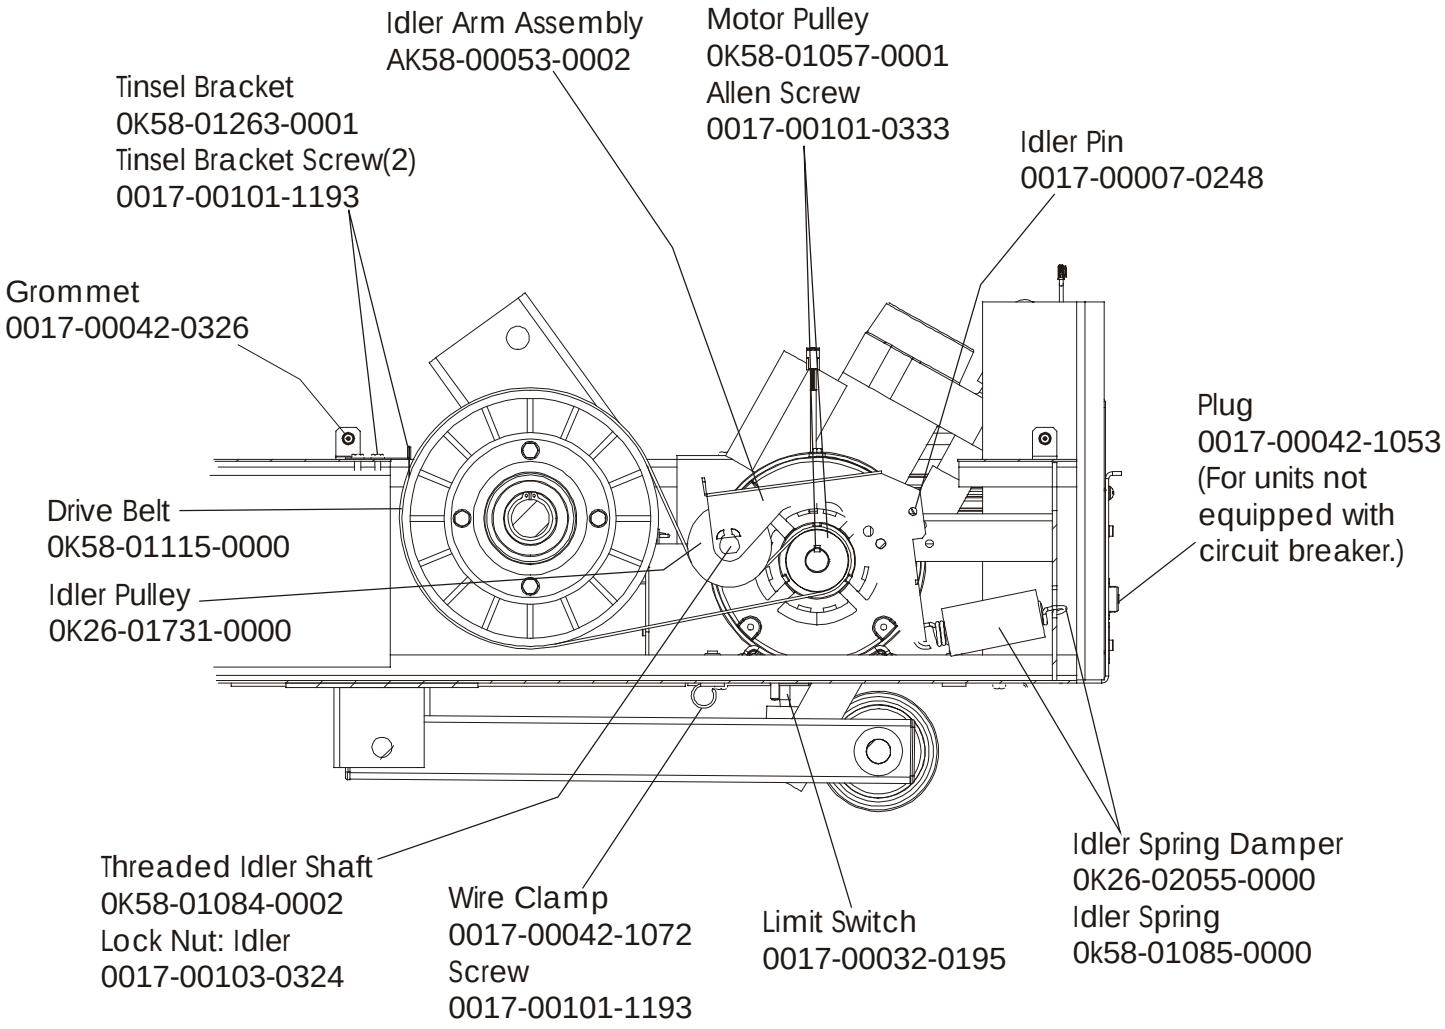

TREADMILL 97TE

Leveler Assembly AK58-00052-0000 *97TE-0_ _ _-01*

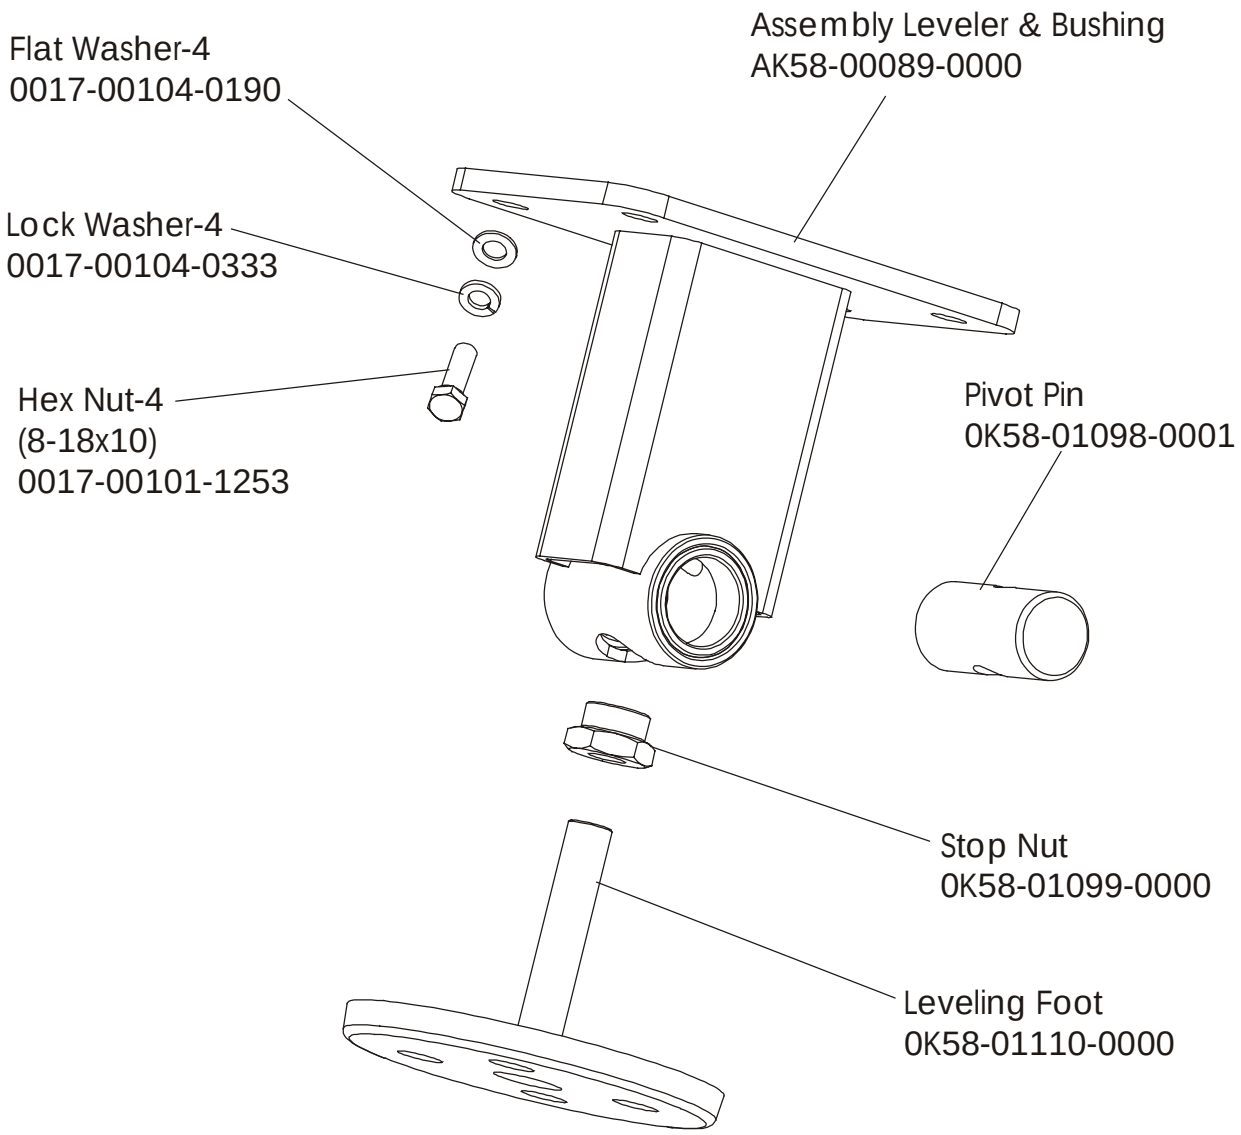

TREADMILL 97TE

Front Roller Assembly AK58-00067-0000 *97TE-0_ _ _-01*

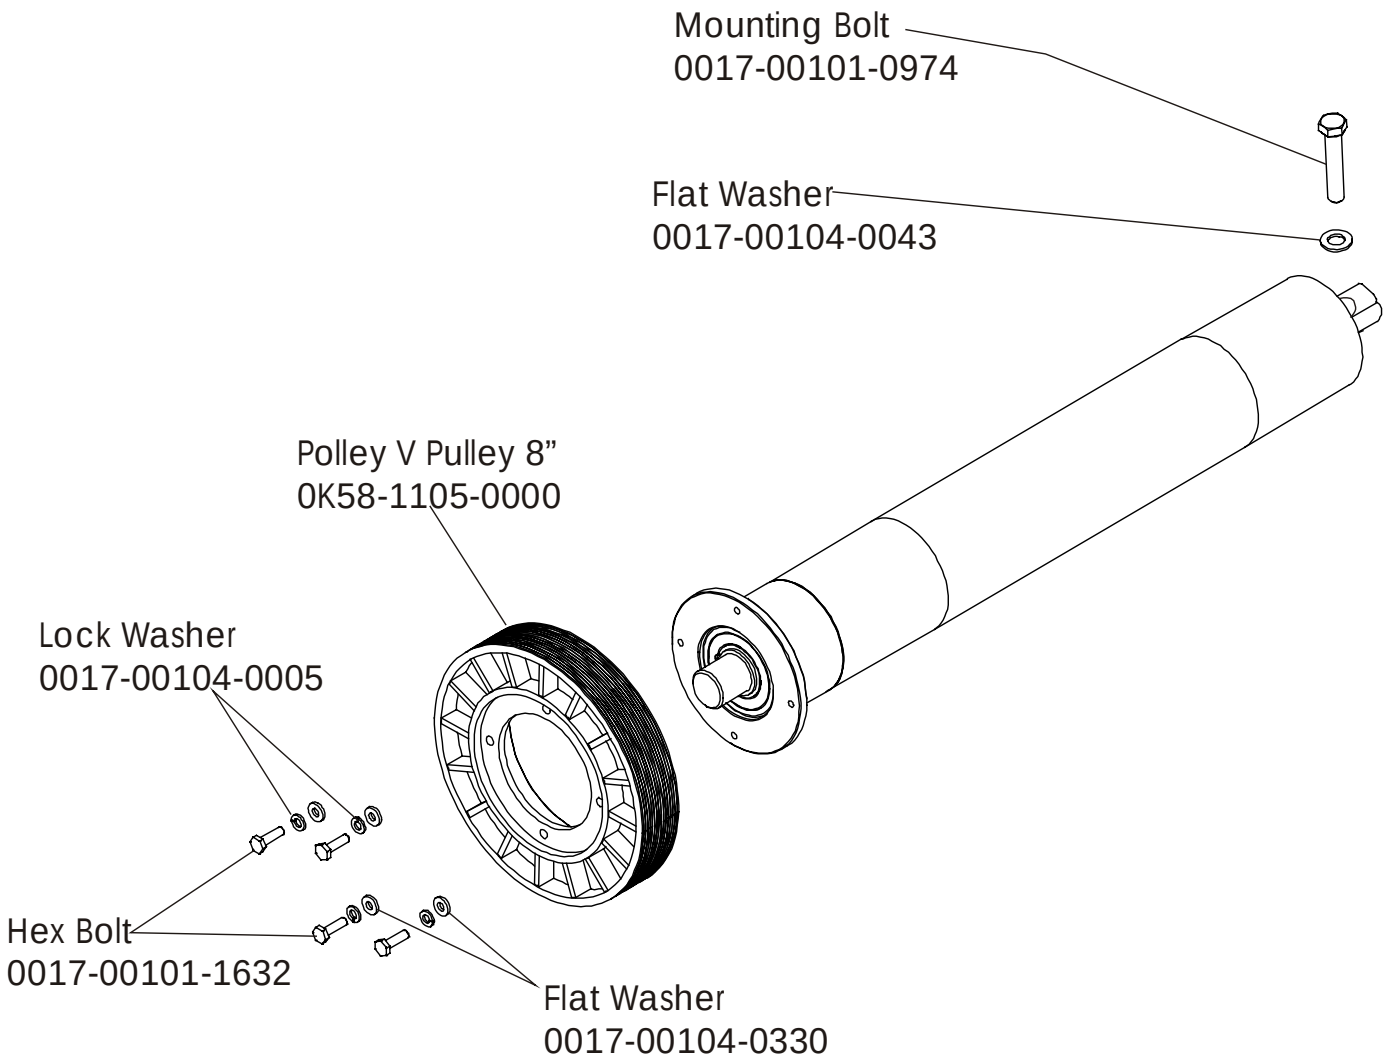

TREADMILL 97TE

ERGO Bar w/LifePulse *97TE-0_ _ _-01*

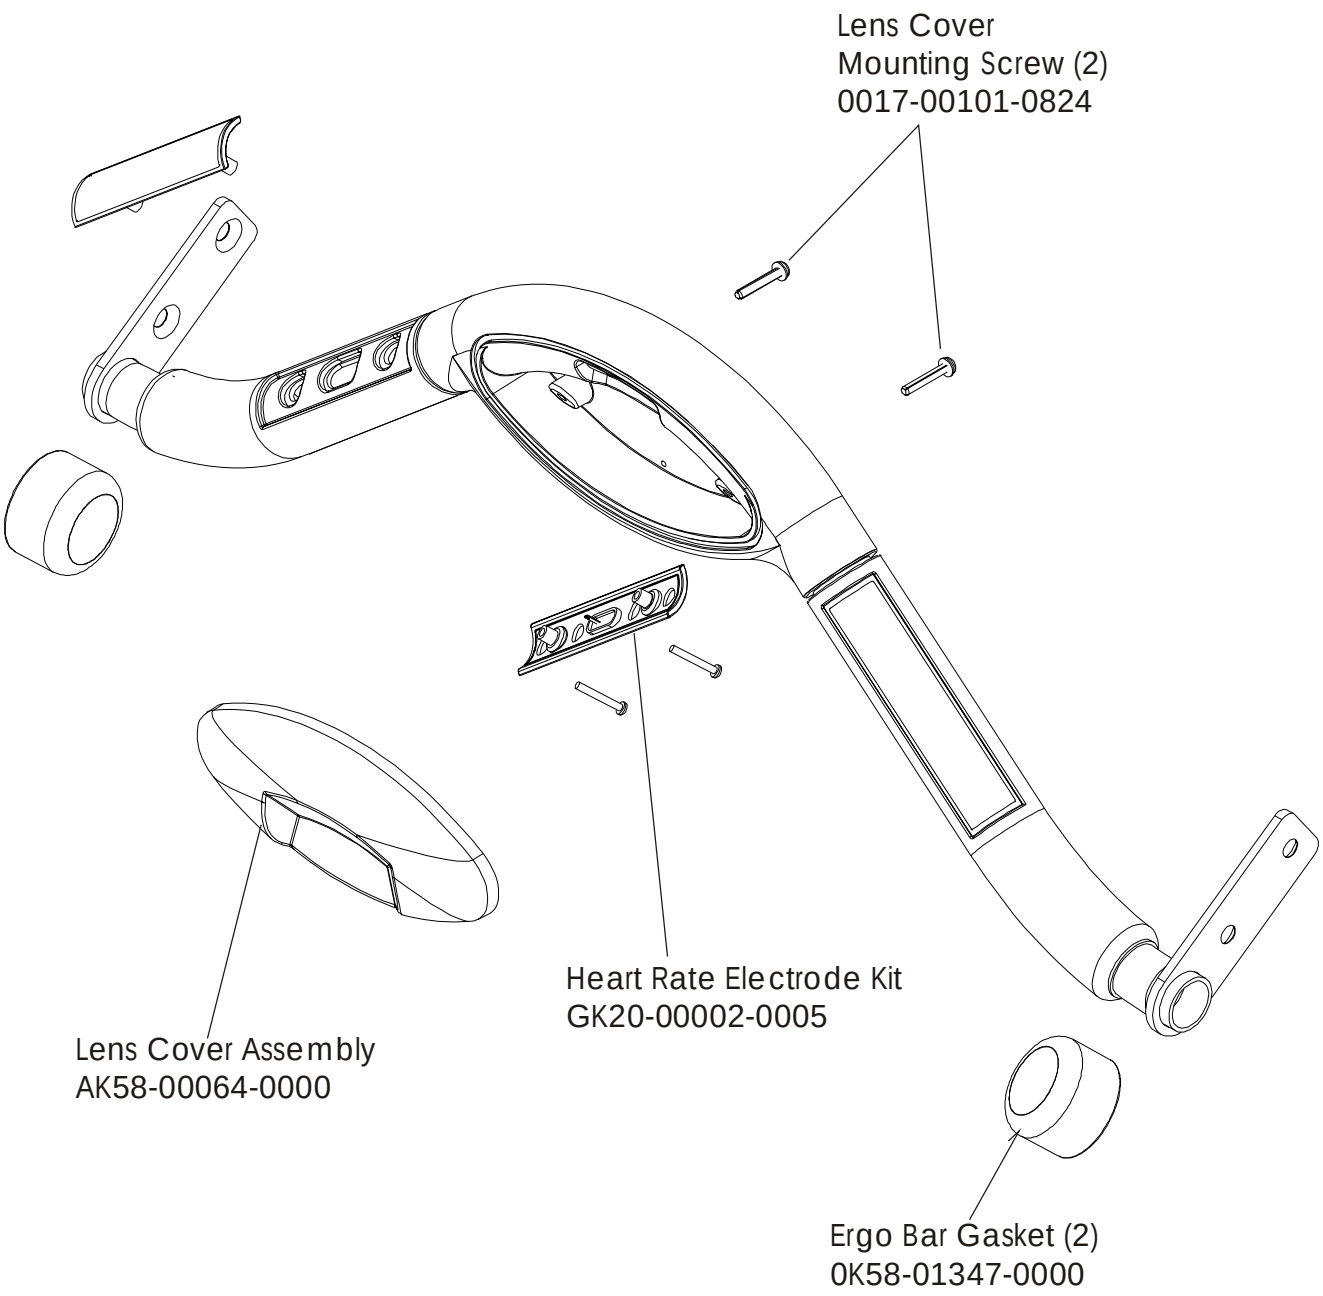

TREADMILL 97TE

Power Components Schematic *97TE-0_ _ _-01*

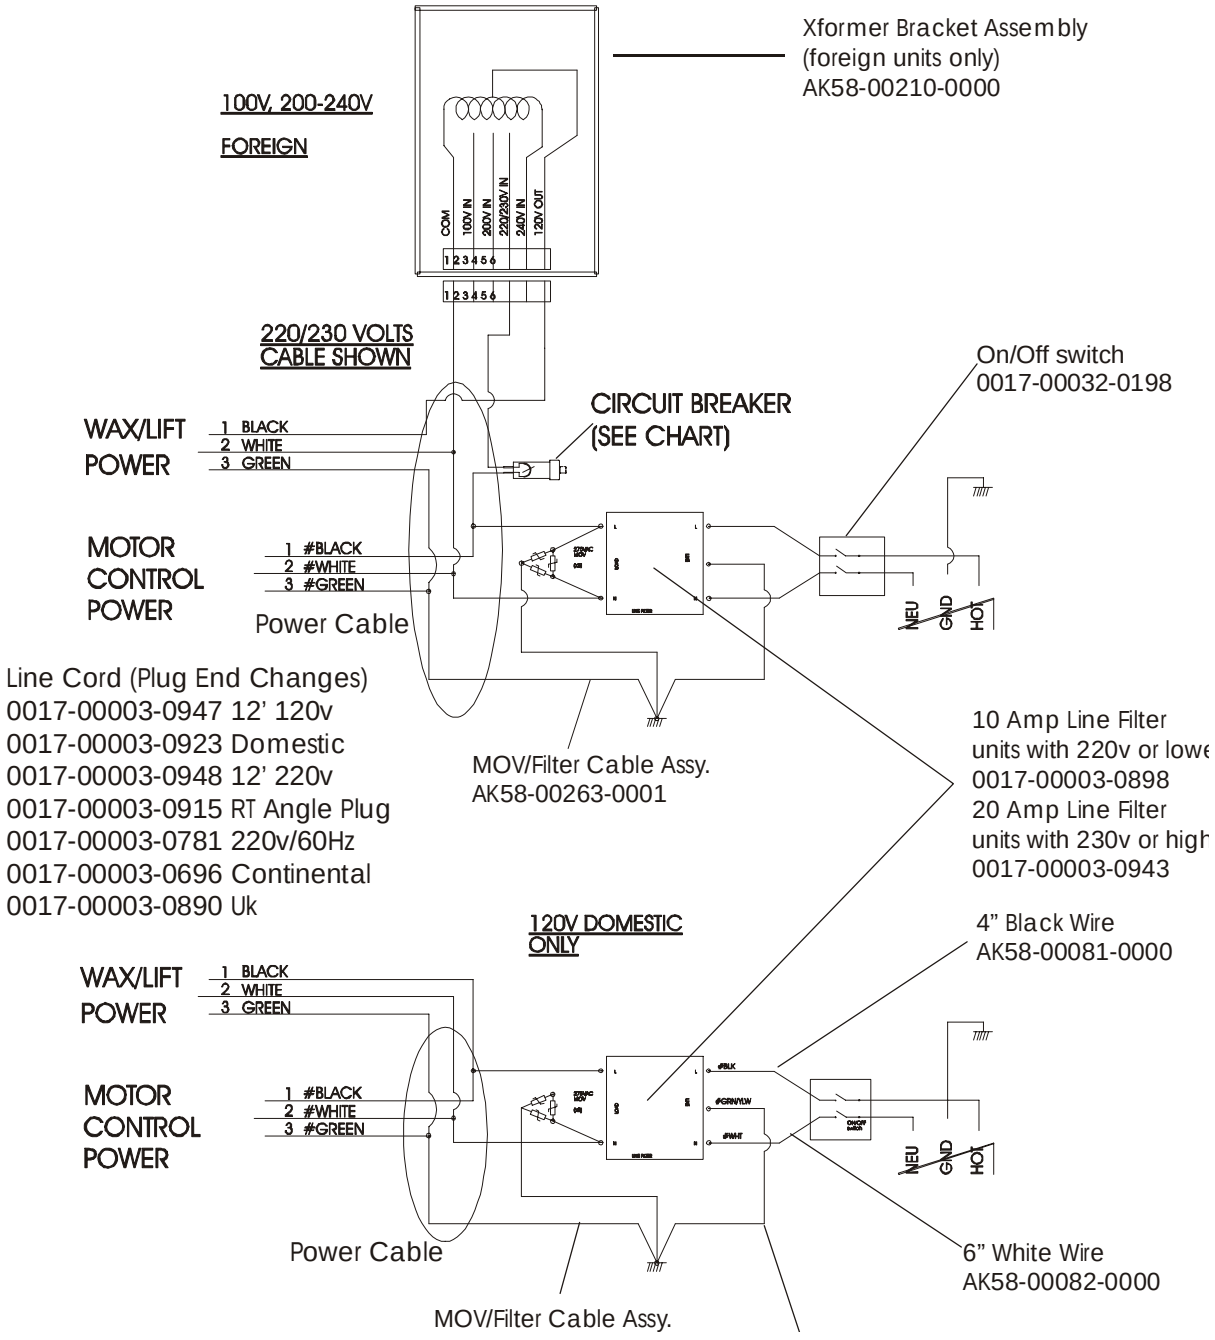

Voltage	Power Cable Part No.	Breaker AMP/Part No.
120V	AK58-00224-0001	NOne
100v	AK58-00302-0001	4 AMP/0017-00003-0950
200v	AK58-00302-0002	2 AMP/0017-00003-0626
220/230v	AK58-00302-0003	2 AMP/0017-00003-0626
240+	AK58-00302-0004	2 AMP/0017-00003-0626

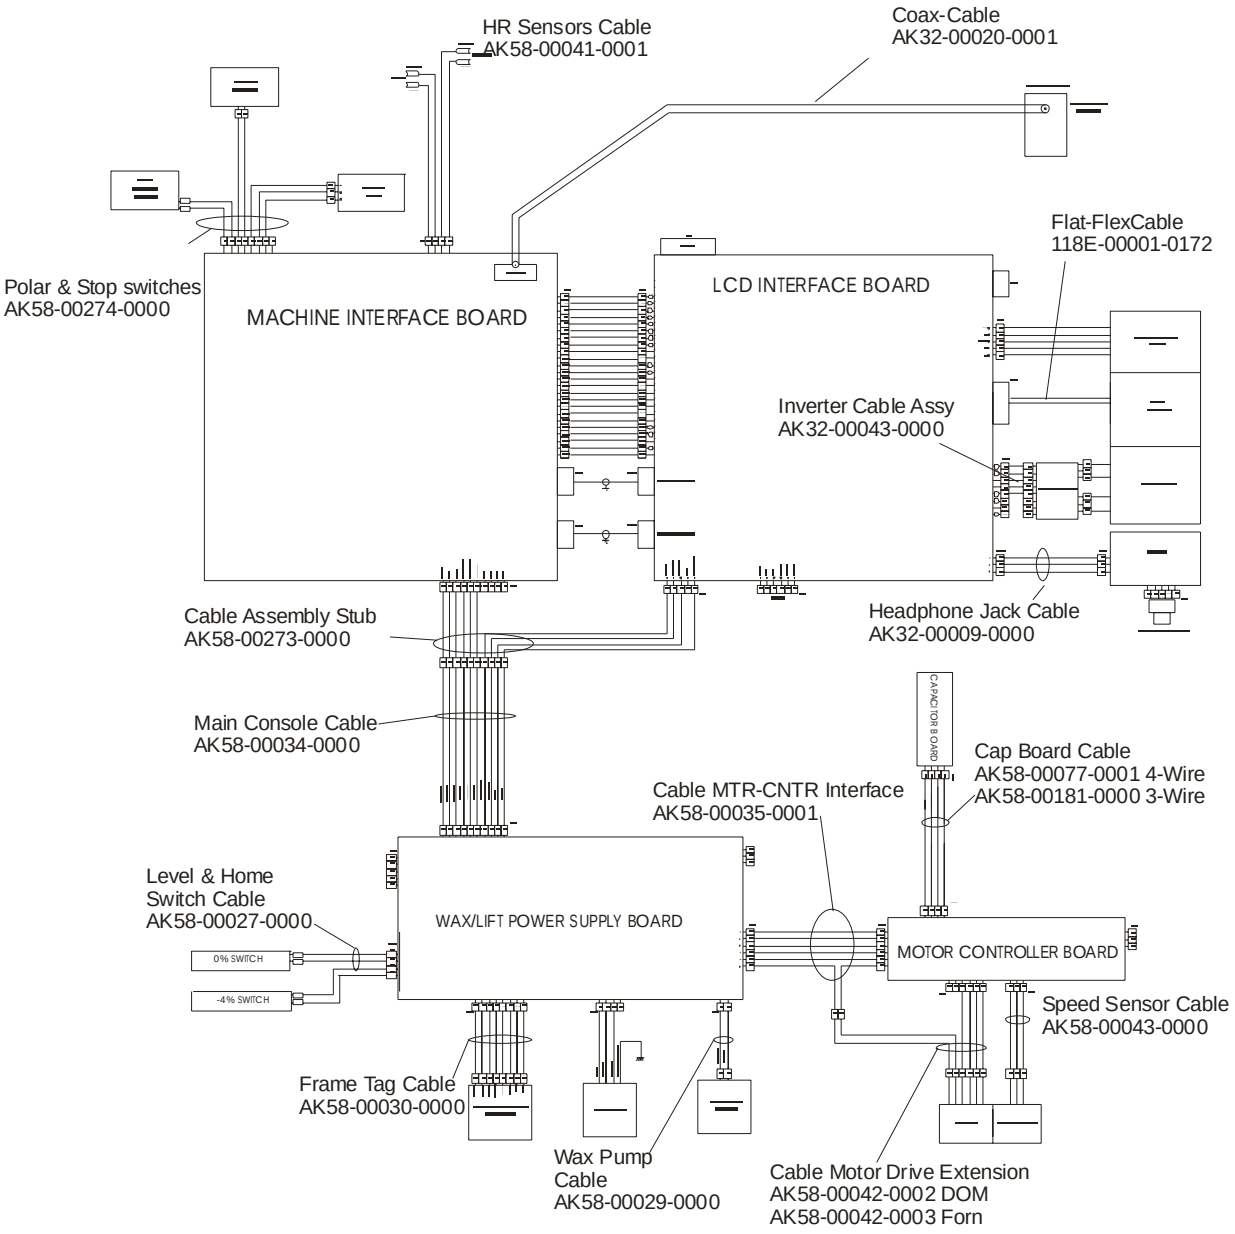
HR Sensors Cable
AK58-00041-0001
Coax-Cable
AK32-00020-0001
Flat-FlexCable
118E-00001-0172
Polar & Stop switches
AK58-00274-0000
MACHINE INTERFACE BOARD
LCD INTERFACE BOARD
Inverter Cable Assy
AK32-00043-0000
Cable Assembly Stub
AK58-00273-0000
Headphone Jack Cable
AK32-00009-0000
Main Console Cable
AK58-00034-0000
CAPACITOR BOARD
Cap Board Cable
AK58-00077-0001 4-Wire
AK58-00181-0000 3-Wire
Cable MTR-CNTR Interface
AK58-00035-0001
Level & Home
Switch Cable
AK58-00027-0000
WAX/LIFT POWER SUPPLY BOARD
MOTOR CONTROLLER BOARD
0% SWITCH
-4% SWITCH
Speed Sensor Cable
AK58-00043-0000
Frame Tag Cable
AK58-00030-0000
Wax Pump
Cable
AK58-00029-0000
Cable Motor Drive Extension
AK58-00042-0002 DOM
AK58-00042-0003 Forn